




Strut Nut Socket

(CR-MO)

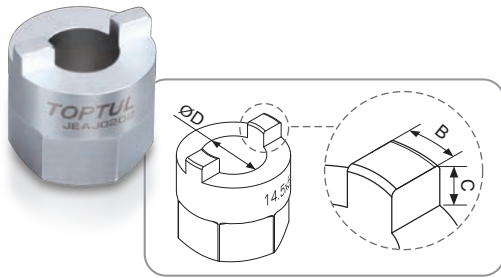

- Made of heat treated and tempered Chrome Molybdenum Steel (CR-MO)
- Suitable for the removal and installation of top shock retaining nut
- Use with 22mm (7/8") spanner

ITEM NO.	SIZE (mm)	B (mm)	C (mm)	ØD (mm)	L (mm)	Applicable		
JEAJ0201	10.5x3.5	3.5	4	10.5	25	VW Golf rear axle	20	160
JEAJ0202	12.5x3.5	3.5	4	12.5	25	VW Polo front axle	20	160
JEAJ0203	14.5x5	5	4	14.5	25	Audi 80, Skoda, Seat, VW Polo / Golf / Passat	20	160
JEAJ0204	14.5x3	3	4	14.5	25	Austin Maestro	20	160
JEAJ0205	14x2.5	2.5	1.5	14	28.5	Mercedes-Benz W203 (C-class) / W209 (CLK)	20	160

3PCS

Strut Nut Socket Set (For VAG)

(CR-MO)




- Suitable for the removal and installation of top shock retaining nut
- Application: Suitable for most Audi, Seat, Skoda, VW vehicles

ITEM NO.	CONTENTS		
JGAR0303	1 JEAJ0201 Strut Nut Socket Internal Ø10.5mm with 3.5mm Pin		
	1 JEAJ0202 Strut Nut Socket Internal Ø12.5mm with 3.5mm Pin	20	120
	1 JEAJ0203 Strut Nut Socket Internal Ø14.5mm with 5.0mm Pin		

Strut Nut Socket

(CR-MO)

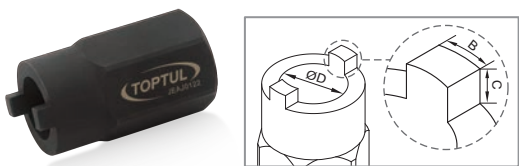


- Suitable for the removal and installation of top shock retaining nut
- Location pegs fit into slots cut in the retaining ring and allow hex key access through the center for release/adjustment of the shock
- Use with 22mm (7/8") spanner
- Material: Heat treated and tempered Chrome Molybdenum Steel (CR-MO)
- Application: Suitable for most VW, Audi vehicles

ITEM NO.	SIZE (mm)	B (mm)	C (mm)	ØD (mm)	L (mm)	Applicable		
JEAJ0122	15x3.6	4.8	3.6	15	44	Most VW, Audi vehicles	6	144

20PCS

Universal Shock Absorber Strut Nut Tool Kit

- A comprehensive set includes various shock absorber sockets and tools to remove and install turnbuckle & adjust the tension on shock absorber for most vehicles
- Application: VW, Audi, Austin, Mercedes-Benz, Honda, Fiat, Seat, Ford, Rover, Opel, Peugeot, Renault, Citroën, Chrysler, Volvo, Nissan, BMW and etc.

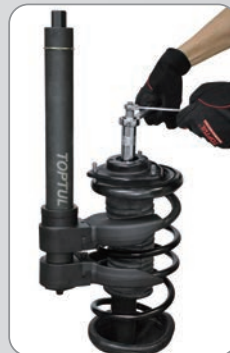

ITEM NO.	CONTENTS		
GZC2008		5	(SET)
1 JEAJ0204	Strut Nut Socket (for Austin Maestro) Internal Ø14.5mm with 3mm Pin		
1 JEAJ0205	Strut Nut Socket (for Mercedes-Benz W203 (C-class) / W209 (CLK)) Internal Ø14mm with 2.5mm Pin		
6 JEBJ0117-0124	Special Long Reach Sockets 17, 18, 19, 21, 22, 24mm		
4 JEAJ015B-0108	10mm Hex Shank Internal Slotted Insert Bits 5.2, 6, 7, 8mm (L=92mm)		
1 JEAJ0211	10mm Hex Shank Female Hexagon Bit Socket 11mm (L=92mm)		
2 JEAJ0306 & 0307	10mm Hex Shank Male Hexagon Insert Bits 6 & 7mm (L=100mm)		
1 JEAJ0412	10mm Hex Shank Spline Insert Bit M12 (L=100mm)		
1 JEAJ0550	10mm Hex Shank Star Insert Bit T50 (L=100mm)		
3 AOAF1010-2222	72 Teeth Pro-Series Ratchet Combination Wrenches 10, 19, 22mm		

PLASTIC BOX: W373 x D289 x H56 (mm)